

Index

AirCard™ E

User Manual

Getting Started

Add Your Item Locator

Locate Your Item

Find Item Out Of Range

When Your Item Is Lost

Resetting Item Locator

Extras

The Fine Prints

Safety Notices




EU Declaration of Conformity / Video tutorial:

https://rsqr.ch/aircarde

Getting Started

01

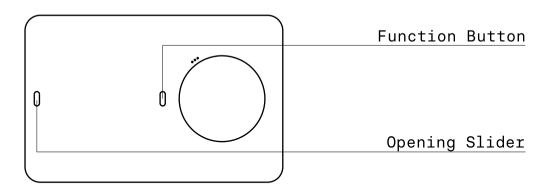

01.1 Power On / Off:

- Press your Item Locator's Function Button once to turn on, it should beep once indicating it is powered on.
- To power off, hold the same button for at least 3 seconds. You will hear 2 beeps indicating your Item Locator is powered off.

01.2 Check For Updates:

• To use the Find My app to locate this item, the latest version of iOS®, iPadOS®, or macOS® is recommended. The Find Items app on Apple Watch® requires the latest version of watchOS®.

O2 Add Your Item Locator

02.1 Start The App

- Open Find My® app on your supported iPhone® or iPad®.
- Allow notifications from the app.

02.2 Connect Your Item Locator

- Power on your ltem Locator.
- Tap+, then "Add Other Item".
- Once your Item Locator is located, tap "Agree".
- Choose a recognizable name and emoji for your Item Locator and tap "Continue".
- Find My™ will ask for confirmation to add your Item Locator to your Apple ID tap "Continue".
- Tap "Finish" and your Item Locator will be set up and ready to be connected to whatever item you wish to locate, e.g., your wallet.

Locate Your Item

03

03.1 Find Item Locator When It's Nearby:

- Open Find My app and select the "Items" tab or open the Find Items app on your Apple Watch.
- Tap on your Item Locator from the list.
- Tap "Play Sound" to make your Item Locator beep.
- Tap "Stop Sound" to stop the beeps once you find.

03.2 Find Item Locator's Last Known Location:

- Open Find My app and select the "Items" tab or open the Find Items app on your Apple Watch.
- Tap on your Item Locator from the list.
- Your Item Locator's last known location will appear on the map.
- To navigate to that last known location, tap "Directions" to open the Apple Maps app.

04 Find Item Out Of Range

04.1 Enabling "Notify When Left Behind":

- Open Find My app and select the "Items" tab or open the Find Items app on your Apple Watch.
- Tap on your Item Locator from the list.
- Under "Notifications" enable the "Notify When Left Behind" toggle.
- You will receive a notification when you leave your Item Locator behind and it's no longer in range of your device.

04.2 Enabling "Notify When Found":

- Under "Notifications", enable the "Notify Whe Found" toggle.
- When your Item Locator is seen by another Find My enabled device, you will receive a notification of its updated location.
- Note: "Notify When Found" can only be activated when your Item Locator is out of range.

When Your Item Is Lost 05

05.1 Enabling "Lost Mode":

- Open Find My app and select the "Items" tab or open the Find Items app on your Apple Watch.
- Tap on your Item Locator from the list.
- Under "Lost Mode" tap "Enable".
- A screen detailing Lost Mode will pop up, tap "Continue"
- Enter your phone number or email address and tap "Next".
- You may enter a message that will be shared with the person that finds your item.
- Tap "Activate" to enable "Lost Mode".
- Note: When "Lost Mode" is enabled, "Notify When Found" is automatically enabled.
- Note: When "Lost Mode" is enabled, your Item Locator is locked and cannot be paired to a new device.

06 Resetting Item Locator

06.1 Remove The 1tem Locator From Find My App:

- Open Find My app and select the "Items" tab.
- Tap on your Item Locator from the list.
- Please ensure "Lost Mode" is disabled.
- Scroll to the bottom of the screen and tap "Remove Ttem".
- A summary will open, tap "Remove" to confirm.

06.2 Factory Reset Your Item Locator:

- After successfully removing the Item Locator from Find $\mathsf{My^{\mathsf{TM}}}$ app, press the Item Locator's function button four times rapidly, you will hear a beep each time you press it and then hold it a fifth time until you hear a ringing chime.
- The Item Locator is now reset and ready to be paired to a new device.

Extras 07

07.1 Replace The Battery:

- Slide the opening slider on the back of your Item Locator to carefully open the shells.
- Replace the battery with a new CR2016 battery placing it positive side up (text facing up).
- Carefully close the Item Locator by aligning the top hole on both sides.

04.2 Unwanted tracking:

If any Find My network accessory separated from its owner is seen moving with you over time, you'll be notified in one of two ways:

- 1. If you have an iPhone, iPad, Find My will send anotification to your Apple device. This feature is available on iOS or iPadOS 14.5 or later.
- 2. If you don't have an iOS device or a smartphone, a Find My network accessory that isn't with its owner for a period of time will emit a sound when it's moved.

These features were created specifically to discourage people from trying to track you without your knowledge.

08 The Fine Print

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. NOTE: The manufacturer is not responsible for any radio or Tv interference caused by unauthorized modifications or changes to this equipment. Such modifications or changes not expressly approved by the party responsible for compliance could void the user's authority to operate this device. The device has been evaluated to meet general RF exposure requirement, The device can be used in portable exposure condition without restriction. Federal Communication Commission (FCC) Radiation Exposure Statement Power is so low that no RF exposure calculation is needed.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radiofrequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Use of the Works with Apple badge means that a product has been designed to work specifically with the technology identified in the badge and has been certified by the product manufacturer to meet Apple Find My network product specifications and requirements. Apple is not responsible for the operation of this device or use of this product or it's compliance with safety and regulatory standards. Apple Find My, Apple Watch, Find My, iPhone, iPad, iPadOS, Mac®, macOS and watchOS are trademarks of Apple Inc. IOS is a trademark of Cisco and is used under license.

09.1 Safety notices concerning UL 4200A-2023

- Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- Even used batteries may cause severe injury or death.
- Call a local poison control center for treatment information.
- Compatible batteries: CR2016
- Nominal battery voltage: 3.0 V
- Non-rechargeable batteries are not to be recharged.
- Do not force discharge, recharge, disassemble, heat above 70°C (158°F) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.

- Ensure the batteries are installed correctly according to polarity (+ and -).
- Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
- Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
- Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

AWARNING

- INGESTION HAZARD: This product contains a button cell or coin battery.
- DEATH or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause Internal Chemical Burns in as little as 2 hours.
- KEEP new and used batteries OUT OF REACH of CHILDREN
- Seek immediate medical attention if a battery is suspected to be swallowed or inserted inside any part of the body.





